

aiwa

Exos Home Speaker



LED Display
with high/mid/low dimmer control

2 x 15W RMS



Headphone Jack &
AUX-IN Jack



FM Radio
with 20 Preset Stations



Digital Clock



Bluetooth®

SAFETY PRECAUTIONS

1. READ AND FOLLOW ALL INSTRUCTIONS. HEED ALL WARNINGS .

2. Do not use device near water.
3. Clean only with dry cloth.
4. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
5. Do not install near any heat sources such as radiators, heat registers, stoves, or other devices (including amplifiers) that produce heat.
6. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
7. Protect the power cord from being walked on or applied force that may bend the plugs, prongs, wires or device entry points.
8. Only use attachments/accessories specified by the manufacturer.
9. Unplug this device during lightning storms or when unused for a long period of time.
10. This appliance shall not be exposed to dripping or splashing water and that no object filled with liquids such as vases shall be placed on or next to the device.
11. Do not overload wall outlet. Only use power source as indicated.
12. Use replacement parts as specified by the manufacturer.
13. Upon completion of any service or repairs to this product, ask the service technician to perform safety checks.
14. Power Sources - This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instruction.
15. Object and Liquid Entry - Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
16. Damage Requiring Service - Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - a) When the power-supply cord or plug is damaged,
 - b) If liquid has been spilled, or objects have fallen into or onto the product.
 - c) If the product has been exposed to rain or water.
 - d) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
 - e) If the product has been dropped or damaged in any way.
 - f) When the product exhibits a distinct change in performance.
17. Disconnect plugs completely from sockets.
18. Do not expose batteries to excessive heat.
19. Excessive sound pressure from earphones and headphone can cause hearing loss.
20. Keep external objects away at a minimum distance of 4 inches around the device for sufficient ventilation.
21. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
22. No naked flame sources, such as lighted candles, should be placed on or next to the device.
23. Dispose batteries properly based on local laws and regulations.

TO PREVENT FIRE OF SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.



The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product is enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN

CAUTION TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONEL.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

SAFETY PRECAUTIONS CONT.

FOLLOW THE ADVICE BELOW FOR SAFE OPERATIONS

ON PROTECTION AGAINST LASER ENERGY EXPOSURE:

- As the laser beam used in this compact disc player is harmful to the eyes, do not attempt to disassemble the casing.
- Stop operation immediately if any liquid or solid object falls into the cabinet.
- Do not touch the lens or poke at it. If you do, you may damage the lens and the player may not operate properly.
- Do not place any object that is not a suitable disc inside the CD compartment. The laser diode will stay ON while the CD door is kept open. Do not keep the CD compartment door open.
- If the device is unused for a long period of time, make sure that all power sources are disconnected from the device. Remove all batteries from the battery compartment.
- This device employs a laser. The use of controls or adjustment or performance of procedures other than those specified here may result in exposure to hazardous radiation.
- This device should not be adjusted or repaired by anyone except qualified service personnel.

ON PLACEMENT

- Do not use the device in places which are extremely hot, cold, dusty or humid.
- Place the device on a flat and even surface.
- Do not restrict the air-flow of the unit by placing it in a place with poor ventilation, by covering it with a cloth or by placing it on a carpet.

ON CONDENSATION

- When left in a warm and damp room, water droplets or condensation may form inside of the device.
- When there is condensation inside of the device, it may not function normally. Let it standby for 1 to 2 hours before turning the power on, or gradually heat the room up and dry the device before use.

Should any trouble occur, remove the power source and refer servicing to qualified personnel.

CLASS 1 LASER PRODUCT

CLASS 1 LASER PRODUCT
APPAREIL LASER DE CLASSE 1
PRODUCTO LASER DE CLASE 1

CAUTION
INVISIBLE LASER RADIATION
WHEN OPEN AND INTERLOCKS
DEFEATED.
AVOID EXPOSURE TO BEAM

 


This product contains a low power laser device.

WHAT'S INCLUDED


- Al6006 Exos Home speaker
- AC Adapter (DC 12V --- 3.5A \diamond --- \diamond)
- 2xAAA batteries (for remote control)
- Remote Control
- User Manual

YOUR REMOTE

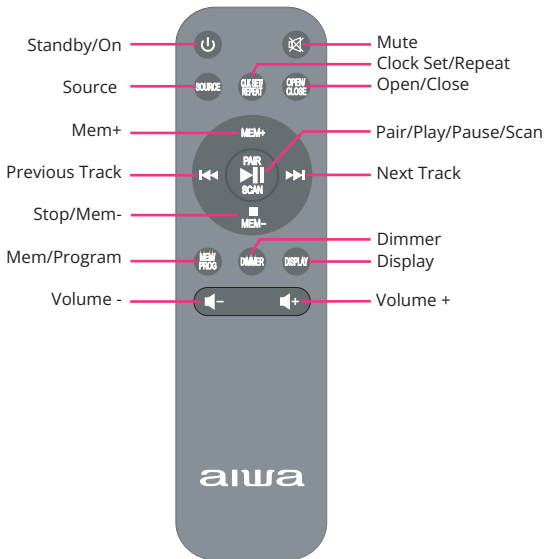

Inserting Batteries

 1. Your remote control takes 2 AAA batteries (included).
2. Open the battery compartment on the rear of your remote.
3. Insert batteries with the correct polarity (+, -).
4. Close the battery compartment.

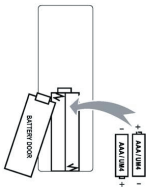


BATTERY WARNING:

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickle-cadmium) batteries.
- Batteries are not to be inserted with the wrong polarity.
- Exhausted batteries are to be removed.
- The supply terminals are not to be short-circuited.


Please recycle or dispose of the battery properly. Contact local recycling facilities and/or the manufacturer of your battery for further information

YOUR SPEAKER

 Front View

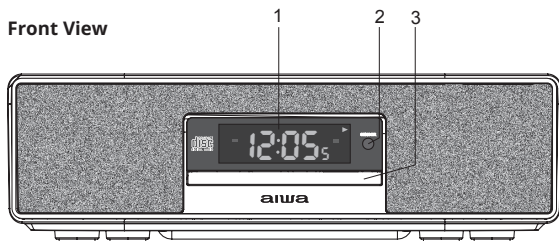

Rear View

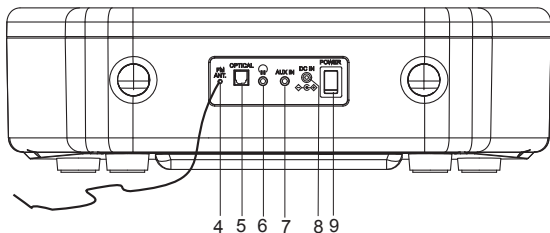 


1. LED Display Screen
2. IR Sensor
3. CD Compartment Door
4. FM Antenna
5. OPTICAL IN Jack
6. Headphone Jack
7. AUX IN Jack
8. DC INPUT Jack
9. Power Switch

POWERING

AC POWER OPERATION

1. Insert the DC plug adapter into the DC INPUT Jack at the back of your speaker.
2. Plug the AC adapter plug into a standard 120V AC outlet in your home.
3. Press the Power Switch to the ON position to power up the speaker. The speaker will turn on standby mode and the display screen will flash 12:00 to indicate the clock is ready to be set up.

 Note: Unplug when not in use for extended periods.

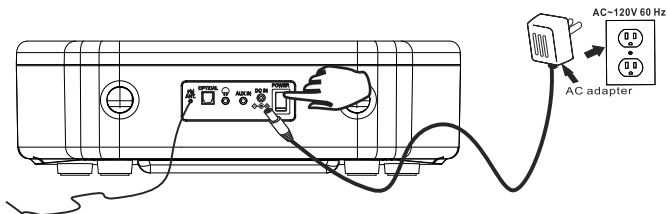

SETTING THE TIME

While the speaker is on standby mode, you can set the time on your display screen.

To set the hour:

1. Press and hold the Clock Set button on the remote until the hour digits start to blink on the display screen.

2. Repeatedly press the ◀◀ button or ▶▶ button on your remote to set the hour. Press and hold the buttons for fast reverse/forward setting.

Note: Be aware of setting a PM hour or an AM hour, the PM indicator on the left of the display screen will light during a PM hour and turn off during an AM hour.



To set the minute:

1. Press the Clock Set button to confirm the hour and the minute digits will start to blink.

2. Repeatedly press the ◀◀ button or ▶▶ button to set the minute. Press and hold the buttons for fast reverse/forward setting.

3. Press the Clock Set button to confirm and complete the setting. The display will stop blinking.

Note: The speaker will automatically save and exit the time set mode if you do not press the Clock Set button within 10 seconds.



USING YOUR REMOTE

Press the Standby/On button to put device into standby mode.

Press the Mute button to mute sound/music.

Press the Source button to switch between modes CD, FM, AUX IN, Bluetooth and OPTICAL IN.

Press and hold the Clock Set/Repeat button on standby mode to set the time.

Press the Clock Set/Repeat button to repeat track.

Press the Mem+ button to go to the next preset station on FM radio mode.

Press the ►► button to skip track, change the time on standby mode, or go to the next station on FM radio mode.

Press the ◀◀ button to go to the previous track, change the time on standby mode, or go to the next station on FM radio mode.

Press the ►|| button to pause or play the track.

Press and hold the ►|| button to start scanning on FM radio mode.

Press the Stop/Mem- button to stop track or press twice to end a CD program.

Press the Stop/Mem- button on FM radio to go to the previous preset station.

Press and hold the Mem/Program button to set FM radio presents or CD programs.

Press the DIMMER button to adjust the display screen brightness.

Press the DISPLAY button to turn on or off display screen.

Press the 🔊- button to lower the volume.

Press the 🔊+ button to raise the volume.



CD FUNCTION

IMPORTANT NOTE

The CD player is designed to work with all commercial discs. It may not play some recordable CDs or computer CDs.

USING THE SPEAKER TO PLAY CDs

1. Press the Standby/On button to power on the speaker.
2. If the speaker is not in CD mode, press the Source button on your remote repeatedly until CD mode is selected. The display screen will show "- -" briefly. If no CD has been loaded in the CD compartment, the display screen message will change to show "no" to indicate that there is no disc.
3. Press the "OPEN/CLOSE" button on the remote control to open the CD compartment door.
4. Carefully load a CD disc with its label side upward into the CD compartment then press the OPEN/CLOSE button on the remote control to close the CD door.
5. The player will start reading the contents of the disc. The total number of tracks on the CD will appear on the display screen after a few seconds.

Using Your Remote Control To Play Music On CD Mode

Press the ►|| button to start playing.

Tap the Volume - button or Volume + to lower or raise the volume.

To pause track, press the Play/Pause button.

To resume playing, press the Play/Pause button again.

You can go to a previous track by pressing the ◀◀ button or go to the next track with the ▶▶ button. The display screen will indicate the current track number.

To locate a particular section within a track, press and hold the ◀◀/▶▶ buttons until the section is found.

To stop track, press the Stop button.

To repeat the current track, press the Repeat button once. The track will continue to play until the repeat function is turned off.

To repeat all tracks, press the Repeat button twice. All the tracks on the disc will be played repeatedly.

To cancel repeat function, press the REPEAT button until REPEAT indicator turns off from the display screen.

CD FUNCTION CONT.

SETTING UP PROGRAMS

This function allows tracks to be played in a programmed sequence.



TO SET UP A PROGRAM:

1. In CD stop mode, press the Program button. The program indicator ("PROG") will illuminate and Program Number "P01" will show on the display screen.
2. Press the **◀◀** or **▶▶** button to select the desired track. The track number "1" will blink on the display screen to prompt for input.
3. Press the Program button to confirm the selection. The Program Number will advance to "P02".
4. Repeat steps 2 & 3 to program up to a maximum of 20 tracks.
5. When a maximum of 20 tracks have been programmed, the display screen will show "FUL" to indicate the program is at full capacity.
6. When you have completed programming, press the Play/Pause button to start playing. The program ("PROG") and Play/Pause indicators will briefly illuminate.
7. To cancel programmed play, press the Mem- button twice. The program indicator ("PROG") will shut off.


NOTE: You can also set programs using the MEM/PROG button on the remote control.


BLUETOOTH FUNCTION


The Bluetooth feature enables you to stream and play digital music from your Bluetooth enabled device to your speaker.

1. With your speaker on standby mode/on, press the Source button repeatedly to select Bluetooth mode. The Bluetooth indicator  will start to flash on the display screen. The speaker will go into auto connection mode and search for a previously paired device that is active and in range (30 feet/10 meters).
2. To pair a new device, go to the Bluetooth settings menu of your Bluetooth enabled device, and make sure Bluetooth is turned on. Go to the Bluetooth menu and select "Aiwa Exos Home" from the list of available devices (If required, enter the pass code "0000" to connect).
3. Once a connection is made, you will hear a tone and the indicator light  will stop flashing and remain solid.
4. You can now play music from your Bluetooth enabled device wirelessly to your speaker.



Using Your Remote Control On Bluetooth Mode

Press the  button to play or pause music.

Press the  button to skip to next song.

Press the  button to skip to previous song.

Adjust the volume using the Volume - and Volume + buttons.

To pair with a different Bluetooth device, press and hold the  button, the Bluetooth indicator  will flash. The speaker will go into pairing/discoverable mode. Repeat steps #2 to #3 above to make a new link.

NOTES:

- If your Bluetooth enabled device does not support A2DP, it will not play the music through the AI6006 system even after it is paired and connected successfully.
- If you are pairing and connecting your personal computer to the AI6006 using Bluetooth, you may need to set the AI6006 as your computer's default sound device.

AUX IN FUNCTION

 
You can play other music sources (iPods, MP3 players or other digital audio players) through the speakers of the speaker by connecting the AUX IN Jack to your external player's audio out jack or headphone jack.

1. Plug one end of a 3.5mm audio cable (not included) into the AUX IN Jack located at the back of the speaker and the other end of the cable to the headphone jack of your digital audio player.
2. Press the Source button repeatedly until AUX IN mode is accessed. The "AUX" indicator will light up on the display screen.
3. Turn on and start playing the external device you plugged into the AUX IN Jack.
4. Slowly adjust both the volume controls of your unit and the external device until you reach a comfortable listening level.
5. Turn off both the external audio player and your speaker after use. Unplug the audio cable from AUX IN Jack.

NOTES:


--If you connect the speaker to the line-out jack of your external device, you only need to adjust the volume of your speaker. If you connect to the headphone jack of your external device, you may need to adjust both the volume controls of your external device and the speaker to obtain a desirable listening level.

--Remember to turn off the speaker when you have finished listening. Don't forget to switch off the power of your external audio device as well.

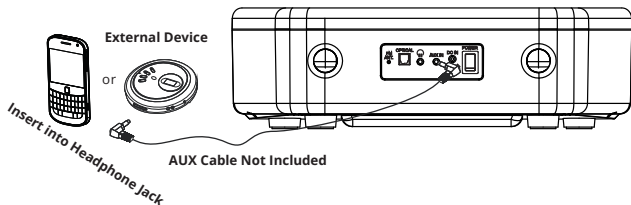

TV/OPTICAL AUDIO FUNCTION

 1. Plug one end of an optical cable (not included) into the OPTICAL IN Jack located at the back of the speaker and the other end of the cable to the optical out jack of your TV or digital audio player.
2. Press the Standby/On button to turn the speaker on
3. Press the Source button repeatedly to select OPTICAL IN mode, the optical indicator will light up on the display screen.
4. Turn on and start playing the TV or other external device that is plugged into the OPTICAL IN Jack.
5. Cautiously adjust both the volume controls of your speaker, by using your speaker remote, and the TV or other external device until you reach a comfortable listening level.

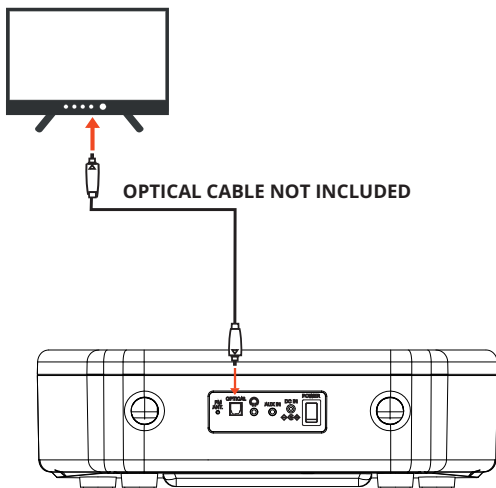

FM RADIO FUNCTION

1. Press the Standby/On button to put your speaker in standby mode.
2. Press the Source button repeatedly until FM mode is accessed. The “FM” indicator on the display screen will light up.

Using Your Remote Control On FM Radio Mode

Press the ◀◀ button or the ▶▶ button to search through available FM radio stations.

Adjust the volume to your desired level using the Volume + and Volume - buttons.

SETTING YOUR RADIO PRESETS

This device allows you to preset up to 20 FM stations for easy recall at any time.

1. Turn on the speaker, and press the Source button repeatedly until FM radio mode is activated.
2. Select your desired radio station using the ◀◀/▶▶ buttons.
3. Press the Mem button until “P01” shows on the display screen.
4. Press the ◀◀/▶▶ buttons to select a preset number (P01-P20).
5. Press the Mem button again to confirm the preset.
6. Repeat steps 3 through 5 to preset up to 20 stations.

RECALL A PRESET STATION

To recall one of the preset stations already programmed, tap the M- button or M+ button repeatedly until you reach the desired preset radio station.

 
NOTE: You can overwrite a present station by storing another station number in its place.

CONNECT YOUR HEADPHONES

Insert the plug of your headphones (not included) into the Headphone Jack located on the rear panel. After successful connection, the speakers will disconnect and the sound will channel through the headphones.

Read this Important Information before Using Your Headphones

- Avoid extended play at very high volume as it may impair your hearing.
- If you experience ringing in your ears, lower the volume or shut off the speaker.
- Keep the volume at a reasonable level.

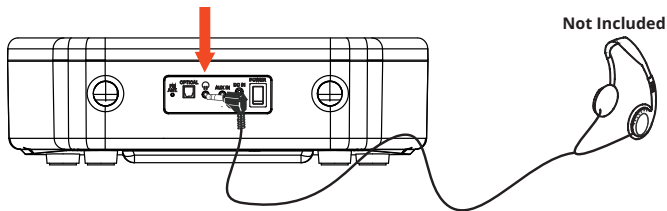

TROUBLESHOOTING GUIDE

Problem	Possible Cause	Solution
The device does not respond (no power)	The device is disconnected from the AC outlet.	Reconnect to the AC outlet.
	The AC outlet has no power.	Try another AC outlet.
Device is ON but there is low or no volume	Volume set too low.	Use the Volume buttons on your remote to raise the volume.
FM no sound	Device not in Radio mode.	Press Source button to select FM.
Noise or sound distorted on FM broadcast	Station is not tuned properly.	Reposition the device and tune the FM broadcast station again.
No sound on Bluetooth mode	Device is not linked with your Bluetooth enabled device.	Go through "Bluetooth Operations" process to link the speakers.
	Device placement out of range.	Relocate the device within Bluetooth operating range (30 feet).
	Your Bluetooth enabled device Volume is set too low.	Increase Volume level of your Bluetooth enabled device.
CD player will not play	Device is not in CD mode.	Press Source button to select CD.
	CD is installed incorrectly.	Insert CD with label side outward.
	If the CD is self-compiled, the media used may not be compatible with the player.	Use better quality blank media and retest.
CD skips while playing	Disc is dirty or scratched.	Wipe CD with clean cloth or use another disc.
Intermittent sound from CD Player	Dirty or defective disc.	Clean or replace the defective disc.
	Dirty pickup lens.	Use a CD-lens cleaning cloth to clean the lens.
	Player is subject to excessive shock or vibration.	Relocate the player away from shock or vibration.
Sound is distorted	Volume level is set too high.	Decrease the volume.
	Sound source is distorted.	Try a different sound source. If you are using an external sound source such as an older generation of iPod, try reducing the output volume on the device itself.
Device gets warm after extended play at high volume	This is normal.	Turn the device off for a period of time or lower the volume.

CARE AND MAINTENANCE

1. Do not subject the unit to excessive force, shock, dust or extreme temperatures.
2. To prevent fire or shock hazard, disconnect your unit from the AC power source when cleaning.
3. Do not tamper with the internal components of the unit.
4. Clean your unit with a dry cloth. Solvents or detergents should never be used.
5. Avoid leaving your unit in direct sunlight or in hot, humid or dusty places.
6. Keep your unit away from heating appliances and sources of electrical noise such as fluorescent lamps or motors.
7. If interruptions or stops occur in the music during CD play, or if the CD fails to play at all, the disc's bottom surface may require cleaning. Before playing, wipe the disc from the center outwards with a soft cleaning cloth.



8. If the front panel becomes dirty or smudged with fingerprints it may be cleaned with a soft cloth slightly dampened with a mild soap and water solution. Never use abrasive cloths or polishes as these will damage the finish of your device.

CAUTION: Never allow any water or other liquids to get inside the unit while cleaning.

FCC STATEMENT

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

SPECIFICATIONS

Radio Frequency Range: FM 87.5 - 108MHz

Bluetooth: V5.1

Audio Output Power: 15Wx2 (RMS)

Power Source: Input AC 120V~60Hz

AC Adapter: Output DC 12V , 3.5A 

*Note: specs may change due to factory model or system upgrades

WARRANTY

This warranty covers the original consumer purchaser only and is not transferable.

This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

What Is Not Covered By Warranty

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

To Obtain Warranty Service and Troubleshooting Information:
Call (877) 397-8200 or visit our website at www.aiwa.co.

To receive Warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the product is within the applicable Warranty period(s), MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address of the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepared.

