

aiwa



RECHARGEABLE **PORTABLE BLENDER**

USER MANUAL

Model Number: WBL1-1004-WHT


Customer Service: 833-902-2335

aiwasupport@xtremeconnected.com

PRODUCT INTRODUCTION

Thank you very much for using our portable blender, its operation is simple and convenient. This blender has a built-in rechargeable lithium-ion battery and is easy to use.

Charge Before Use

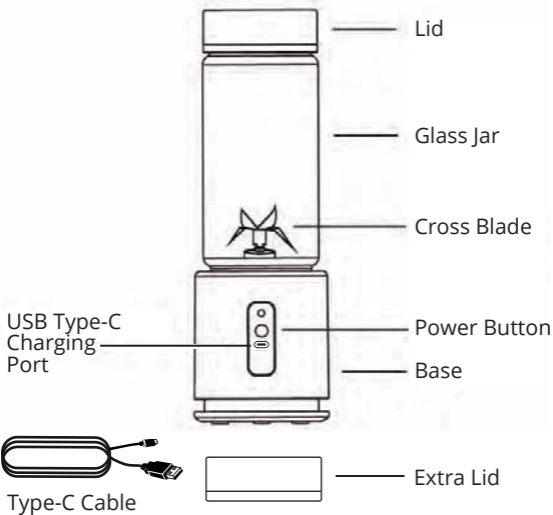

OPERATION

1. Please charge this product before use. 2-3 hours are needed to fully charge this product.
2. Clean the glass jar with warm water before using. While assembling, make sure that the jar is completely screwed in tight on the base.
3. Fill the blender jar with the fruit/vegetable pieces of your choice.

Note: It is recommended to cut food into small pieces equivalent to the size of 1.5 by 1.5in for efficient blending. Fill the jar to about 80% with a mix of approximately 40% fruit and 60% water. Avoid using hard pieces of food as this will stop the blender from operating. In the event where the food is too hard, the blender will stop operating for about 10 seconds and a red LED will flash.

4. Tighten the jar lid and double press the power button to start blending.

Note: The operating time duration for blending is 20 seconds. Shaking the blender during operation can enable better blending. Let the product rest for 5 minutes for every 4 blending cycles to protect the motor from overheating.

5. Once the operation is complete, single press the power button to turn it off.

CHARGING INSTRUCTION:

When the battery is low, the red LED light will flash. Connect the provided USB Type-C charging cable to the blender's Type-C USB charging port. Insert the other end to a 5V USB power source (not included). The charging LED indicator will illuminate red during charging and will switch to solid blue when the blender is fully charged.

PRODUCT FEATURES

- Rechargeable Lithium-Ion Battery
- Threaded dual layer tempered glass carafe
- Built-in safety protection switch
- Stainless steel jagged blades
- Stainless steel base and lid
- Silicone ring seal
- USB-Type-C charging cord
- Extra lid for storage

SAFETY AND CARE INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons.

1. Please read all instructions before using this product.
2. This product works with a DC motor driven by a rechargeable battery. Please charge this product with the provided USB cable before use. It is recommended to charge the product at least once every 15 days.
3. This product is only for personal or household use.
4. This product is not suitable for harder foods such as meat and nuts, use accordingly.
5. Keep out of reach of children or those that

require supervision.

6. Do not use abrasive solvents to clean the unit.
7. Add ingredients to jar first before beginning to blend.
8. Do not open the lid, or remove the jar from the base, when the product is running.
9. Do not put hand or other hard object into the jar, when it is attached to the base, so as to avoid accident.
10. Never press the blend button when the jar is removed from the base. Use caution when handling with the jar removed as the blades are sharp.
11. Do not immerse the base in water, or do not allow the charging port to become wet, in order as to prevent damage of electronic components.
12. Do not expose the product to extremely high or low temperatures. Prolonged exposure to extreme heat or cold reduces battery longevity.
13. Do not expose to heat sources, the sun, or leave in a hot vehicle. Do not dispose of in a fire.
14. Do not disassemble, there are no serviceable parts inside. Do not drop. Do not use if damaged or modified or if you see any bulging, swelling, leakage or other abnormality. Never insert objects other than the specified cable into the base of product. Products with damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.

Note: Lithium-ion rechargeable batteries will self-discharge over time, and it is normal for battery performance to decline after several years of usage. To ensure battery life, do not store the product in an uncharged state for a length of time. If left in a discharged state for too long a lithium-ion battery will no longer have the ability to be recharged.

When discarding, follow your local/state guidelines for product containing Lithium-ion batteries.

CLEANING THE JAR, BASE, AND BLADE

To clean the base and blade, turn off the power button, take off the jar from the base, and then use a soft brush or wet rag to wipe the surface. Take extra precaution when cleaning the blender blade due to its sharpness. Always keep fingers away from the blades during cleaning. Make sure to never press the blend button when the jar is removed.

To clean the jar, fill it with water while it is still connected to the base. Then, add soap and close the lid tight. Press the power button and shake the portable blender up and down for a thorough clean. Pour out the water and dry as necessary.

Troubleshooting And Removal		
Fault	Reason	Solution
Unable to turn on or stops during operation, red light flashes.	The cup body is not in position or the power is running low.	Tighten the cup body, or charge in time.
The blender stopped during operation.	There is an automatic stop after 20 seconds of operation.	Press the power button to start blending again.
The blender stopped during operation, and the red LED is flashing.	There may be hard objects within the blender that caused the motor to lock.	Remove the hard objects and start blending again.
There is water leakage.	The silicone ring is not in position.	Put the silicone ring back in place.
Will not operate.	Battery needs to be charged.	Charge the unit.

PRODUCT SPECIFICATIONS

Rate Power: 100W

Capacity: 13.5-ounce glass carafe

Battery Capacity: 4000mah

Dimensions: H(9.75") x W(3.25") x D(3.23")

Recommended Charging Requirements: 5V/1.5A
(USB Type-C)

Includes:

Portable Blender, 2 Drinking Lids, Silicone Ring Seal
USB Type-C Charging Cable, User Manual

ONE YEAR WARRANTY

AIWA warrants its products for one year against defects in manufacturing under regular consumer use with original receipt of retail purchase. We believe in our products and want to provide you with a replacement, if needed, but we have to know about the problem while the product is still under warranty. If you discover a defect covered by this warranty, please contact us about receiving a replacement. In order to use the products warranty the customer must provide proof of the retailers receipt.

*Any customers outside of the U.S. will be responsible for shipping and handling charges if a replacement is required that is not due to a manufacturing defect. If there is not a manufacturing defect, shipping and handling will be applied.

AIWA's warranty is limited to our products only. Our warranty does not cover the replacement or repair cost of any third-party accessory, electronic device or personal property.

For instructions about how to obtain warranty service for your product and product support, please contact Customer Service: 833-902-2335.
aiwasupport@xtremeconnected.com

Content is subject to change without prior notice.

Some content may differ from how the product works with your specific device.

Please call for customer support: 833-902-2335
or email: aiwasupport@xtremeconnected.com.

©2023 Aiwa Acquisitions LLC. AIWA and associated marks are owned by Aiwa Acquisitions and used under license.

Licensed and Manufactured by Xtreme Connected Home, Inc.