

**aiwa**



# **TOASTER OVEN**

2 SLICE WIDE SLOT

**Model Number: WTO1-1004-BLK**

Customer Service: 833-902-2335

[aiwasupport@xtremeconnected.com](mailto:aiwasupport@xtremeconnected.com)

## IMPORTANT SAFEGUARDS

If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

The appliance is for household and indoor use only, do not use outdoors.

Appliances are not intended to be operated by means of an external timer or separate remote-control system.

The temperature of accessible surfaces may be high when the appliance is operating. The outer surface may get hot, when the appliance is operating.

Symbol  meaning: Caution, hot surface!

When using electrical appliances, basic safety precautions should always be followed including the following:

## READ ALL INSTRUCTIONS

- Before switching on, ensure that the voltage on the characteristics plate is the same as in your home.
- To protect against electrical shock, do not immerse the cord, plug or any part of the toaster in water or other liquid.
- Do not operate any appliance with a damaged cord or plug, or in any abnormal state. If the main cord is damaged, it must be replaced by the manufacturer or the nearest service agent or a qualified person.
- First use the toaster for a few minutes without bread. There will be some smoke at first; this is entirely normal.
- The toaster reaches very high temperatures, particularly in the area of the openings for the bread.
- Do not use the toaster close to or under curtains of other inflammable material.
- Do not leave the toaster operating without supervision.
- Do not use the appliance for other than its intended use.
- Do not place the cord or any other object over the bread openings on the toaster while it is in use.
- Do not cover the toaster while it is in use.
- Keep the toaster away from flames or hot areas.
- Keep the toaster out of reach of children.
- Do not insert utensils, oversize food, or metal foil packages in the toaster as they may cause fire or electric shocks.

- If the cord is damaged, or any examination, or adjustment of the appliances, to avoid hazards; it must be replaced by the manufacturer or by an Authorized Technical Service.
- Do not touch hot surface.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge.
- This appliance is not intended to be operated by means of an external timer or separate remote-control system.


## **OPERATION**

- Place the toaster on a stable, level and heat-resistant surface.
- Plug toaster into a wall power outlet and adjust the dial to desired number.
- Put the bread into the openings and press the start control down. It remains down until the bread is toasted.
- Once toasted, the slices appear in the openings and the start lever returns to its original position. The toaster switches "OFF" automatically.
- Press the "CANCEL" button to release the start lever if you wish to stop the toaster. This switches the toaster to "OFF".
- If an end of the bread sticks in the toaster, unplug it, wait for it to cool, and remove the bread. Take care not to touch the heating elements.
- REHEAT: The Reheat button will reheat your bread without browning it. This is a low temperature setting.
- DEFROST: The Defrost button will first defrost your bread before toasting it. This is an extended cycle setting

## **TOASTING TIPS**

- Dry and thin slices will toast quicker than moist or thick slices.
- If toast starts to smoke, stop the toasting cycle.
- Do not heat toaster that has bread applied with butter or other spreads.
- Use a lower setting when toasting a single bread slice or slightly dry bread.
- Use a higher setting when toasting fresh or whole wheat bread.
- When toasting raisin or other fruit breads, remove any loose raisins from the surface of the bread before placing into the toaster.
- Cut bread into standard size (3.94 x 3.94 x 0.39 inch) to avoid uneven toast.

## DIAGRAM

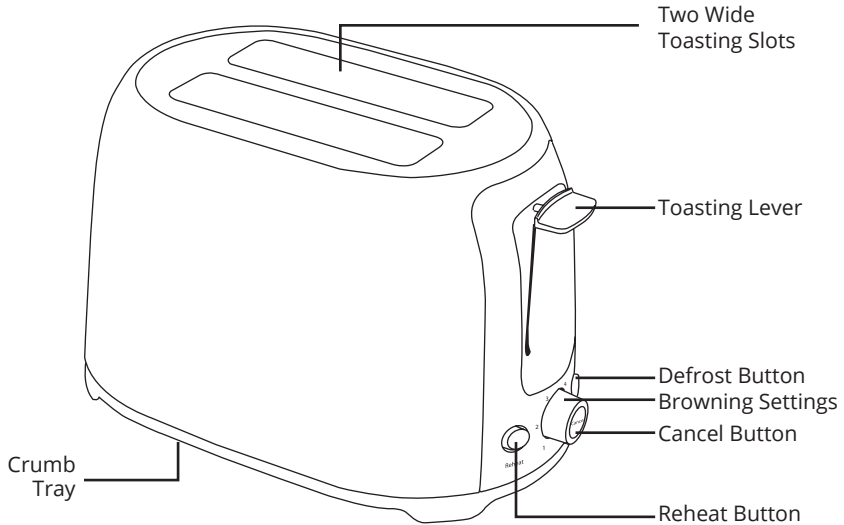

## CLEANING INSTRUCTION

- Ensure that the toaster is unplugged before cleaning it.
- Never place it in the water or any other liquid.
- To clean, UNPLUG THE TOASTER AND ALLOW TO COOL.
- Do not insert any object, including bread, in the toaster.
- Wipe outside with soft dry cloth when toaster is cold, never use metal polish.

Open crumb tray at the bottom of the toaster and brush out crumbs. If toaster is used frequently. Accumulated bread crumbs should be removed at least once a week. Make sure the crumb tray is completely closed before using the toaster again.

- Never attempt to remove bread which has jammed in the slots without unplugging the toaster from the electrical outlet first. Be sure, not to damage the internal mechanism or heating elements when removing bread.

## ONE YEAR WARRANTY

AIWA warrants its products for one year against defects in manufacturing under regular consumer use with original receipt of retail purchase. We believe in our products and want to provide you with a replacement, if needed, but we have to know about the problem while the product is still under warranty. If you discover a defect covered by this warranty, please contact us about receiving a replacement. In order to use the products warranty the customer must provide proof of the retailers receipt.

\*Any customers outside of the U.S. will be responsible for shipping and handling charges if a replacement is required that is not due to a manufacturing defect. If there is not a manufacturing defect, shipping and handling will be applied.

AIWA's warranty is limited to our products only. Our warranty does not cover the replacement or repair cost of any third-party accessory, electronic device or personal property.

For instructions about how to obtain warranty service for your product and product support, please contact Customer Service: 833-902-2335.

Content is subject to change without prior notice. Some content may differ from how the product works with your specific device.

©2023 Aiwa Acquisitions LLC. AIWA and associated marks are owned by Aiwa Acquisitions and used under license.

Licensed and Manufactured by Xtreme Connected Home, Inc.

Please call for customer support: 833-902-2335.

### **Includes:**

Toaster, User Manual

### **SPECIFICATIONS:**

Voltage: 120V

Wattage: 800W

Dimension: L(10.1") x W(6.4") x H(6.8")



